



Copernicus II Hookup Guide

Copernicus II Overview

The Copernicus II GPS Module is a 12-channel receiver from Trimble. It has a small form factor, making it a great device for applications requiring precise GPS control. The DIP module board allows you to easily embed this into your projects by providing an easy to connect to interface.

The module supports NMEA, TSIP and TAIP protocols at 1 Hz. The board also is designed to interface with an SMA antenna.



The Copernicus II DIP Module

The module runs at 3.3V and consumes around 40mA at 3.0V. For the TSIP protocol, the module's default baud rate is 38400 bps, while it defaults to 4800 bps for the NMEA protocol. These settings are configurable. The module is permanently set to 8 data bits, no parity, 1 stop bits and no flow control.

Suggested Reading

If you haven't worked with GPS before, or are unfamiliar with serial communication, you may want to read the following tutorials before continuing on with this module.

- [GPS Basics](#)
- [Serial Communication](#)
- [How to Use a Breadboard](#)
- [How to Solder](#)

Hardware Hookup

To get started communicating with the Copernicus II, you will need to connect four pins on the module: VCC, GND, TX-B, and RX-B.


For our example, we will be connecting the module to a terminal window on the computer using a 3.3V FTDI Basic Board, and will be using the GPS Antenna Embedded SMA.

Connections:

Copernicus II → FTDI Basic

- VCC → 3.3V
- GND → GND
- TX-B → RXI
- RX-B → TXO

Take a look at the Fritzing diagram below showing the connections between the Copernicus II and the FTDI Basic.

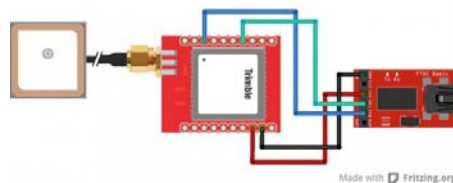

Talking to the Module

Once you have your boards connected, open up your favorite serial terminal program and connect to the appropriate COM port for your FTDI Basic. The connection settings should be 4800 bps, 8 data bits, no parity, 1 stop bit, and no flow control.

If your module is hooked up properly and has a lock, you should see a scrolling output like this.

```

CoolTerm 0.7
File Edit Connection View Window Help
New Open Save Disconnect Clear Data Options View Hex Help
GPGGA,4003.89135,N,10512.58816,W,7,02,0000,0.0,M,0.0,0.0,0000.0,000.0,M,0.0,0.0,0000.0,000.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPGGA,4003.89135,N,10512.58816,W,7,02,0000,0.0,M,0.0,0.0,0000.0,000.0,M,0.0,0.0,0000.0,000.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPGGA,4003.89135,N,10512.58816,W,7,02,0000,0.0,M,0.0,0.0,0000.0,000.0,M,0.0,0.0,0000.0,000.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPGGA,4003.89135,N,10512.58816,W,7,02,0000,0.0,M,0.0,0.0,0000.0,000.0,M,0.0,0.0,0000.0,000.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
GPRMC,A,4003.89135,N,10512.58816,W,0.0,A,0.0,E,0.0,A,0.0,E,0.0,D,0.0,M,0.0,0.0
COM4 / 4800 8-N-1
Connected 88:08:51
TX RX RTS DTR CTS DSR RI
  
```

Copernicus II output in CoolTerm terminal window

As you can see in the GPGGA output, the module is reading the position to be 4003.89135 N and 10512.58816 W, which happens to be SparkFun's headquarters. The module is also currently only seeing 2 satellites, and the location data being output is from the last value stored in the flash (shown by the GPS Quality Indicator of 7). The lack of additional data is due to testing this inside a large building like SparkFun where the signal fades in and out, so you should actually be getting more data from your module if testing near a window or outside with a clear view.

Talking to a Microcontroller

If you're looking to add GPS to your Arduino project using the Copernicus, we suggest you look into the Tiny GPS library. This library is great for parsing out the data that you want to use in your project such as time, altitude, position, etc. There are plenty of resources involving this library around the web. A quick search should yield plenty of examples. If you need a refresher on how to install an Arduino library, instructions can be found [here](#).

Resources and Going Further

Now that you've gotten your module hooked up and can collect gps data from it, it's time to start integrating the module into your projects. Think about adding in gps navigation to an autonomous robot or creating a data logger for your car to track gas usage in different areas. Let us know what kind of cool projects you come up with, and leave us any feedback you might have on the tutorial. Check the files below for additional resources.

Resources

- Copernicus II Datasheet
- Breakout Board Schematic
- Breakout Board Eagle Files