



**MICROCHIP**

---

# **Dawn GUI User's Guide**

---

**Note the following details of the code protection feature on Microchip devices:**

- Microchip products meet the specification contained in their particular Microchip Data Sheet.
- Microchip believes that its family of products is one of the most secure families of its kind on the market today, when used in the intended manner and under normal conditions.
- There are dishonest and possibly illegal methods used to breach the code protection feature. All of these methods, to our knowledge, require using the Microchip products in a manner outside the operating specifications contained in Microchip's Data Sheets. Most likely, the person doing so is engaged in theft of intellectual property.
- Microchip is willing to work with the customer who is concerned about the integrity of their code.
- Neither Microchip nor any other semiconductor manufacturer can guarantee the security of their code. Code protection does not mean that we are guaranteeing the product as "unbreakable."

Code protection is constantly evolving. We at Microchip are committed to continuously improving the code protection features of our products. Attempts to break Microchip's code protection feature may be a violation of the Digital Millennium Copyright Act. If such acts allow unauthorized access to your software or other copyrighted work, you may have a right to sue for relief under that Act.

---

Information contained in this publication regarding device applications and the like is provided only for your convenience and may be superseded by updates. It is your responsibility to ensure that your application meets with your specifications. MICROCHIP MAKES NO REPRESENTATIONS OR WARRANTIES OF ANY KIND WHETHER EXPRESS OR IMPLIED, WRITTEN OR ORAL, STATUTORY OR OTHERWISE, RELATED TO THE INFORMATION, INCLUDING BUT NOT LIMITED TO ITS CONDITION, QUALITY, PERFORMANCE, MERCHANTABILITY OR FITNESS FOR PURPOSE. Microchip disclaims all liability arising from this information and its use. Use of Microchip devices in life support and/or safety applications is entirely at the buyer's risk, and the buyer agrees to defend, indemnify and hold harmless Microchip from any and all damages, claims, suits, or expenses resulting from such use. No licenses are conveyed, implicitly or otherwise, under any Microchip intellectual property rights unless otherwise stated.

**Trademarks**

The Microchip name and logo, the Microchip logo, dsPIC, FlashFlex, flexPWR, JukeBlox, KEELOQ, KEELOQ logo, Klear, LANCheck, MediaLB, MOST, MOST logo, MPLAB, OptoLyzer, PIC, PICSTART, PIC<sup>32</sup> logo, RightTouch, SpyNIC, SST, SST Logo, SuperFlash and UNI/O are registered trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

The Embedded Control Solutions Company and mTouch are registered trademarks of Microchip Technology Incorporated in the U.S.A.

Analog-for-the-Digital Age, BodyCom, chipKIT, chipKIT logo, CodeGuard, dsPICDEM, dsPICDEM.net, ECAN, In-Circuit Serial Programming, ICSP, Inter-Chip Connectivity, KlearNet, KlearNet logo, MiWi, motorBench, MPASM, MPF, MPLAB Certified logo, MPLIB, MPLINK, MultiTRAK, NetDetach, Omniscient Code Generation, PICDEM, PICDEM.net, PICkit, PICtail, RightTouch logo, REAL ICE, SQI, Serial Quad I/O, Total Endurance, TSHARC, USBCheck, VariSense, ViewSpan, WiperLock, Wireless DNA, and ZENA are trademarks of Microchip Technology Incorporated in the U.S.A. and other countries.

SQTP is a service mark of Microchip Technology Incorporated in the U.S.A.

Silicon Storage Technology is a registered trademark of Microchip Technology Inc. in other countries.

GestIC is a registered trademark of Microchip Technology Germany II GmbH & Co. KG, a subsidiary of Microchip Technology Inc., in other countries.

All other trademarks mentioned herein are property of their respective companies.

© 2015, Microchip Technology Incorporated, Printed in the U.S.A., All Rights Reserved.

ISBN: 978-1-5224-0048-6

**QUALITY MANAGEMENT SYSTEM  
CERTIFIED BY DNV  
= ISO/TS 16949 =**

*Microchip received ISO/TS-16949:2009 certification for its worldwide headquarters, design and wafer fabrication facilities in Chandler and Tempe, Arizona; Gresham, Oregon and design centers in California and India. The Company's quality system processes and procedures are for its PIC<sup>®</sup> MCUs and dsPIC<sup>®</sup> DSCs, KEELOQ<sup>®</sup> code hopping devices, Serial EEPROMs, microperipherals, nonvolatile memory and analog products. In addition, Microchip's quality system for the design and manufacture of development systems is ISO 9001:2000 certified.*

**Table of Contents**

<b>Preface .....</b>	<b>5</b>
<b>Chapter 1. Introduction</b>	
1.1 System Requirement .....	9
1.2 Installation .....	10
1.3 Communication Protocol .....	10
1.3.1 Write Byte .....	10
1.3.2 Read Byte .....	10
1.3.3 Write Block .....	11
1.3.4 Read Block .....	11
1.4 Data Interpretation .....	11
<b>Chapter 2. Dawn GUI Panel Layout and Operation</b>	
2.1 Toolbar .....	13
2.2 Variable Control Panel .....	15
2.2.1 Add and Remove Variables .....	15
2.2.2 Read and Write Variable .....	16
2.3 Signal Control Panel .....	18
2.3.1 Add and remove signal .....	18
2.3.2 Signal display control .....	19
2.4 Signal Plotter Pattern .....	19
2.5 Signal Level Plotter .....	20
2.6 Event Log Panel .....	21
2.7 Dawn Application Setting Window .....	22
2.7.1 System Tab .....	22
2.7.2 User Interface Tab .....	23
2.7.3 Device Profile Panel .....	24
<b>Worldwide Sales and Service .....</b>	<b>25</b>

# Dawn GUI User's Guide

---

NOTES:

---

---

## Preface

---

---

### NOTICE TO CUSTOMERS

All documentation becomes dated, and this manual is no exception. Microchip tools and documentation are constantly evolving to meet customer needs, so some actual dialogs and/or tool descriptions may differ from those in this document. Please refer to our website ([www.microchip.com](http://www.microchip.com)) to obtain the latest documentation available.

Documents are identified with a “DS” number. This number is located on the bottom of each page, in front of the page number. The numbering convention for the DS number is “DSXXXXA”, where “XXXX” is the document number and “A” is the revision level of the document.

For the most up-to-date information on development tools, see the MPLAB IDE online help. Select the Help menu, and then Topics to open a list of available online help files.

## INTRODUCTION

This chapter contains general information that will be useful to know before using the Dawn GUI. Items discussed in this chapter include:

- [Document Layout](#)
- [Conventions Used in this Guide](#)
- [Warranty Registration](#)
- [Recommended Reading](#)
- [The Microchip Website](#)
- [Customer Support](#)
- [Document Revision History](#)

## DOCUMENT LAYOUT

This document describes how to use the Dawn GUI as a development tool and debug firmware on a target board. The manual layout is as follows:

- **Chapter 1. “Introduction”** – Describes the system requirement and communication protocol of the Dawn GUI.
- **Chapter 2. “Dawn GUI Panel Layout and Operation”** – Explains the interface and operation of Dawn GUI in detail.

# Dawn GUI User's Guide

---

## CONVENTIONS USED IN THIS GUIDE

This manual uses the following documentation conventions:

### DOCUMENTATION CONVENTIONS

Description	Represents	Examples
<b>Arial font:</b>		
Italic characters	Referenced books	"MPLAB <sup>®</sup> IDE User's Guide"
	Emphasized text	...is the <i>only</i> compiler...
Initial caps	A window	the Output window
	A dialog	the Settings dialog
	A menu selection	select Enable Programmer
Quotes	A field name in a window or dialog	"Save project before build"
Underlined, italic text with right angle bracket	A menu path	<u>File</u> > <i>Save</i>
Bold characters	A dialog button	Click <b>OK</b>
	A tab	Click the <b>Power</b> tab
Text in angle brackets < >	A key on the keyboard	Press <Enter>, <F1>
<b>Courier New font:</b>		
Plain Courier New	Sample source code	#define START
	Filenames	autoexec.bat
	File paths	c:\mcc18\h
	Keywords	_asm, _endasm, static
	Command-line options	-Opa+, -Opa-
	Bit values	0, 1
	Constants	0xFF, 'A'
Italic Courier New	A variable argument	<i>file.o</i> , where <i>file</i> can be any valid filename
Square brackets [ ]	Optional arguments	mcc18 [options] <i>file</i> [options]
Curly brackets and pipe character: {   }	Choice of mutually exclusive arguments; an OR selection	errorlevel {0 1}
Ellipses...	Replaces repeated text	var_name [, var_name...]
	Represents code supplied by user	

## WARRANTY REGISTRATION

Please complete the enclosed Warranty Registration Card and mail it promptly. Sending in the Warranty Registration Card entitles users to receive new product updates. Interim software releases are available on the Microchip website.

## RECOMMENDED READING

This user's guide describes how to use the Dawn GUI. Other useful documents are listed below. The following Microchip documents are available and recommended as supplemental reference resources.

### **Readme Files**

For the latest information on using other tools, read the tool-specific Readme files in the Readmes subdirectory of the MPLAB<sup>®</sup> X IDE installation directory. The Readme files contain updated information and known issues that may not be included in this user's guide.

### **Low-Cost mTouch<sup>®</sup> Evaluation Kit User's Guide (DS40001818)**

This user's guide gives an example of how to use the Dawn GUI for the mTouch applications.

## THE MICROCHIP WEBSITE

Microchip provides online support via our website at [www.microchip.com](http://www.microchip.com). This website is used as a means to make files and information easily available to customers. Accessible by using your favorite Internet browser, the website contains the following information:

- **Product Support** – Data sheets and errata, application notes and sample programs, design resources, user's guides and hardware support documents, latest software releases and archived software
- **General Technical Support** – Frequently Asked Questions (FAQs), technical support requests, online discussion groups, Microchip consultant program member listing
- **Business of Microchip** – Product selector and ordering guides, latest Microchip press releases, listing of seminars and events, listing of Microchip sales offices, distributors and factory representatives

## CUSTOMER SUPPORT

Users of Microchip products can receive assistance through several channels:

- Distributor or Representative
- Local Sales Office
- Field Application Engineer (FAE)
- Technical Support
- Development Systems Information Line

Customers should contact their distributor, representative or Field Application Engineer (FAE) for support. Local sales offices are also available to help customers. A listing of sales offices and locations is included in the back of this document.

Technical support is available through the website at: <http://support.microchip.com>.

## DOCUMENT REVISION HISTORY

### Revision A (December 2015)

Initial Release of this Document.



---

---

## Chapter 1. Introduction

---

---

The Dawn GUI is a PC utility designed to visualize the real-time data and configure the register of mTouch<sup>®</sup> firmware-based devices. A generic I<sup>2</sup>C communication protocol is used to communicate with the target board, so any products with the same protocol can also use this utility to monitor and/or configure the system, such as the Microchip CAP1xx capacitive sensing devices, MCP9800 temperature sensing device, etc.


### 1.1 SYSTEM REQUIREMENT

In order to use the Dawn GUI, the user needs:

- The MCP2221 Breakout module, or other equivalent of the MCP2221 communication board with USB and I<sup>2</sup>C interface
- A PC running Windows<sup>®</sup> XP or higher with USB 2.0 port
- Mini-USB cable
- A product that uses compatible I<sup>2</sup>C protocol

Figure 1-1 shows a typical hardware setup for the low-cost mTouch evaluation kit.

**FIGURE 1-1: TYPICAL HARDWARE SETUP FOR DAWN GUI**

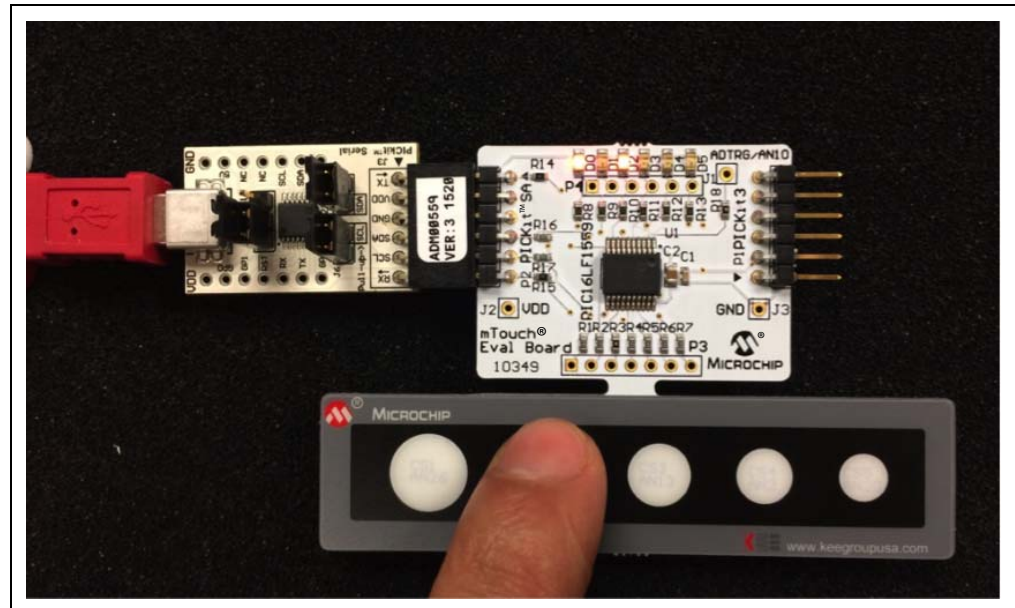

## 1.2 INSTALLATION

The Dawn GUI can be downloaded from the Microchip website ([www.microchip.com/dm160227](http://www.microchip.com/dm160227)). Unzip the file and run the Dawn 1.0 setup.exe; the installation process will start with [Figure 1-2](#), and then follow the installation to finish the setup.

**FIGURE 1-2: DAWN GUI INSTALLATION**



## 1.3 COMMUNICATION PROTOCOL

The Dawn GUI is implemented as the host of a generic I<sup>2</sup>C communication, which supports Read/Write byte and Read/Write block.

### 1.3.1 Write Byte

The Write Byte protocol is used to write one byte of data to a specific register as shown in [Table 1-1](#).

**TABLE 1-1: WRITE BYTE PROTOCOL**

Start	Slave Address	W	ACK	Register Address	ACK	Register Address	ACK	Stop
1->0	0b101000	0	0	XXh	0	XXh	0	0->1

### 1.3.2 Read Byte

The Read Byte protocol is used to read one byte of data from the register shown in [Table 1-3](#).

**TABLE 1-2: READ BYTE PROTOCOL**

Start	Slave Address	W	ACK	Register Address	ACK	Start	Slave Address	R	ACK	Register Data	Nack
1->0	0b101000	0	0	XXh	0	1->0	0b101000	1	0	XXh	1

## 1.3.3 Write Block

The Write Block protocol is used to read multiple bytes to a group of contiguous registers as shown in [Table 1-3](#).

**TABLE 1-3: WRITE BLOCK PROTOCOL**

Start	Slave Address	W	ACK	Register Address	ACK	Register Data	ACK	...	Register Data	ACK	Stop
1->0	0b101000	0	0	XXh	0	XXh	0	...	XXh	0	0->1
						data @ start address	data @ (start address + n)				

## 1.3.4 Read Block

The Read Block protocol is used to read multiple bytes from a group of contiguous registers as shown in [Table 1-4](#).

**TABLE 1-4: READ BLOCK PROTOCOL**

Start	Slave Address	W	ACK	Register Address	ACK	Start	Slave Address	R	ACK	Register Address	ACK
1->0	0b101000	0	0	XXh	0	1->0	0b101000	1	0	XXh	0
...	Register data n	Nack	Stop	data @ (start address + n)							
...	XXh	1	0->1								

## 1.4 DATA INTERPRETATION


The data readout from the devices can be interpreted as different data type, including signed/unsigned 8-bit, 16-bit, 24-bit and 32-bit integer. More details will be discussed in the next chapter.

NOTES:

## Chapter 2. Dawn GUI Panel Layout and Operation

The Dawn GUI Main window consists of a toolbar and five panels as shown in [Figure 2-1](#).

**FIGURE 2-1: DAWN GUI MAIN WINDOW**

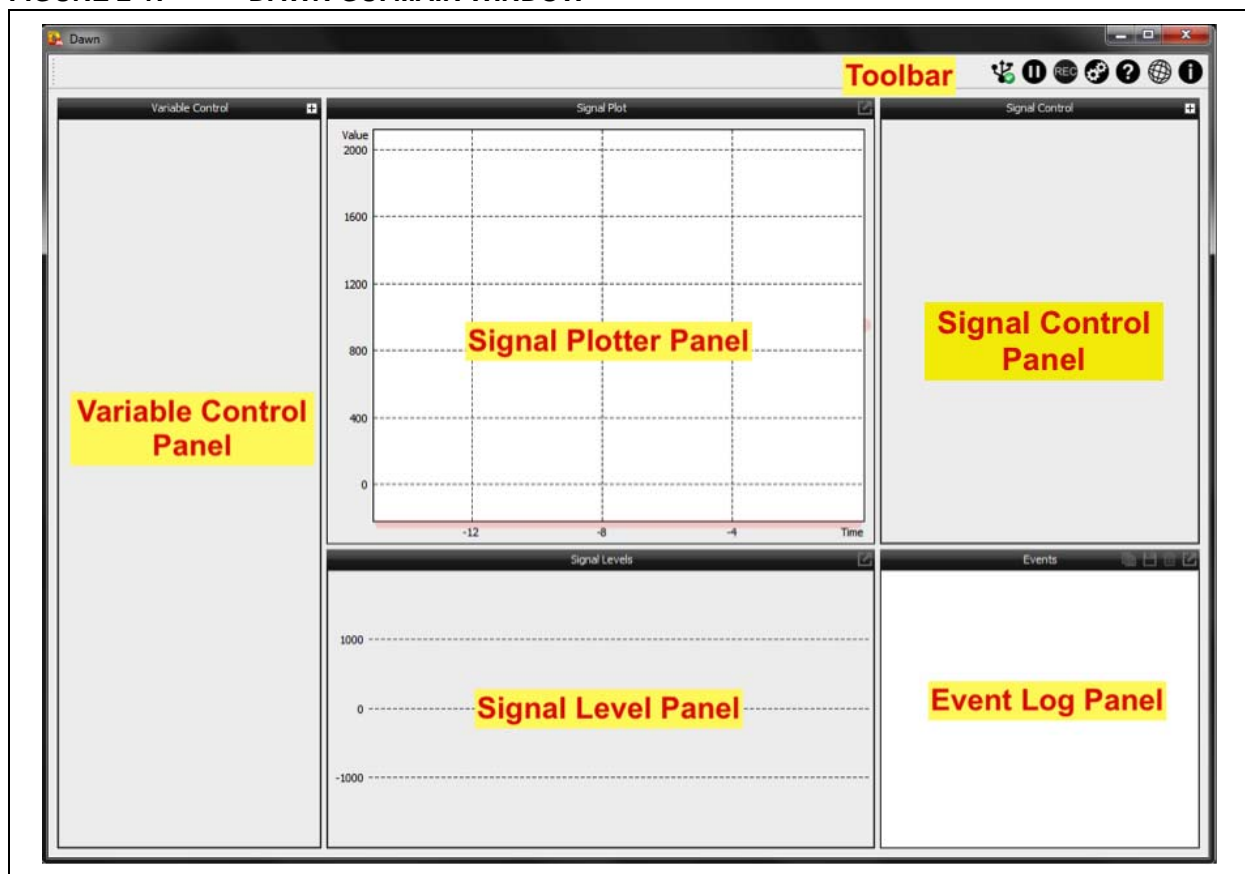

The size of each panel can be adjusted by dragging the edge of the panel container.

### 2.1 TOOLBAR


The Toolbar is located at the top of the Main window, it contains six icons as shown below (see [Figure 2-2](#)):

**FIGURE 2-2: TOOLBAR**



The first icon is an indicator of hardware connection. If the GUI detects the target board, then it will have the green check signed on the icon, otherwise, the red cross sign will appear (see [Figure 2-3](#)).

**FIGURE 2-3: CONNECTION ICON**



Clicking this icon will pause the data display in the signal plotter and the level panel (see [Figure 2-4](#)).

**FIGURE 2-4: PAUSE ICON**



Clicking this icon will bring up a Setting window, which will be discussed in the next section (see [Figure 2-5](#)).

**FIGURE 2-5: SETTING ICON**



This is a quick link to this user's guide (see [Figure 2-6](#)).

**FIGURE 2-6: USER'S GUIDE ICON**



Clicking this icon will open up the link specified in the profile (the Dawn profile will be covered in [Section 2.7.3 "Device Profile Panel"](#)), as can be seen in [Figure 2-7](#).

**FIGURE 2-7: LINK ICON**



Clicking this icon will bring up the Information window for the current GUI (see [Figure 2-8](#)).


**FIGURE 2-8: INFORMATION ICON**



## 2.2 VARIABLE CONTROL PANEL

The Variable Control Panel displays the register value at the location that is assigned by the user. [Figure 2-9](#) shows an example of the mTouch evaluation kit.

**FIGURE 2-9: VARIABLE CONTROL PANEL**

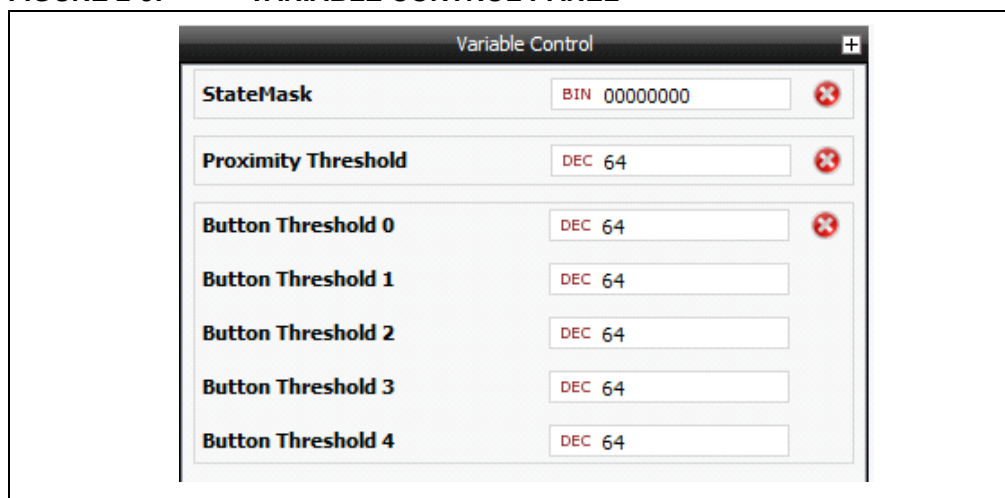

### 2.2.1 Add and Remove Variables


To add a variable to the panel, click the "+" on the top right corner. A window titled "Add new var" will be opened up as shown in [Figure 2-10](#).

**FIGURE 2-10: NEW VARIABLE WINDOW**



The variable address, type and name will be assigned in this window. There are eight variable type options as shown in [Figure 2-11](#).

**FIGURE 2-11: VARIABLE TYPE LIST**

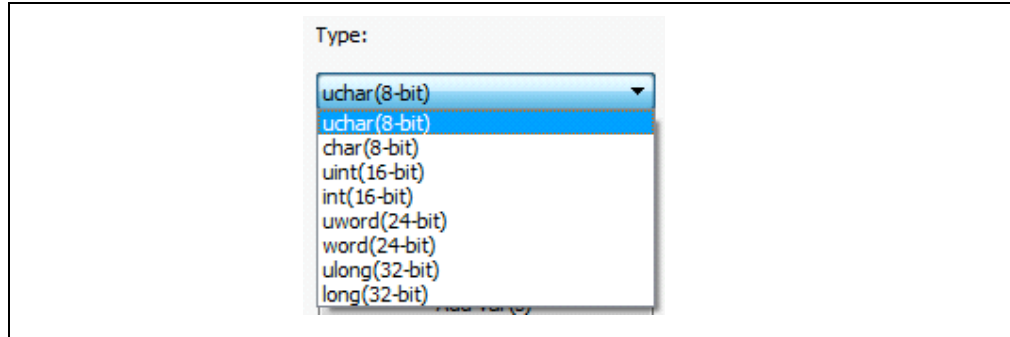

By selecting a different variable type, the Dawn GUI will determine how many bytes need to be read from the target device. For instance, if "word (24-bit)" type is assigned to the address of 0x10, then the GUI will read three bytes from 0x10, 0x11 and 0x13 locations, and concatenate the three bytes following the little endian.

The "Array" checkbox is used to add an array variable and, as shown in [Figure 2-11](#), the "Button Threshold" variables were added as char (8-bit) array.


To remove any variable, click the cross icon to the right of the variable name.

**Note 1:** The array is considered a group, so the remove operation will remove all the array members.

## 2.2.2 Read and Write Variable


The GUI reads each variable from the target device at a fixed rate, and this rate can be altered by right clicking the variable name, as shown in [Figure 2-12](#).

**FIGURE 2-12: REFRESH PERIOD**



Click **Refresh period**, and the refresh period can be changed in the window as shown in [Figure 2-13](#).


**FIGURE 2-13: REFRESH PERIOD SETTING**

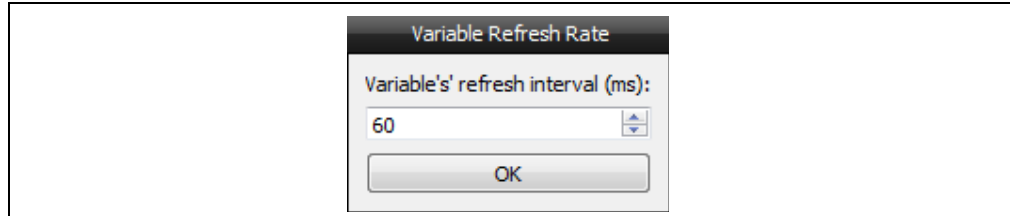




The GUI also allows displaying the variable in different formats, such as decimal, hexadecimal and binary. Clicking the red characters in front of the variable value will toggle the display format. The three display formats are shown in [Figure 2-14](#).

**FIGURE 2-14: TOGGLE DISPLAY FORMAT**

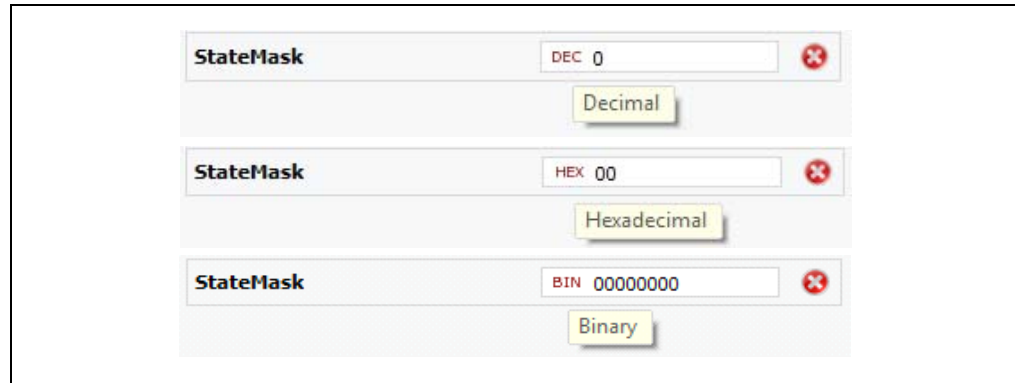

The GUI supports writing variable value back to the target device. For example, set the mouse cursor into the textbox as shown in [Figure 2-15](#), then the variable value can be edited. Hitting **Enter** on the keyboard will finalize the edit and write the value back to the target device.


**FIGURE 2-15: MODIFY REGISTER VALUE**

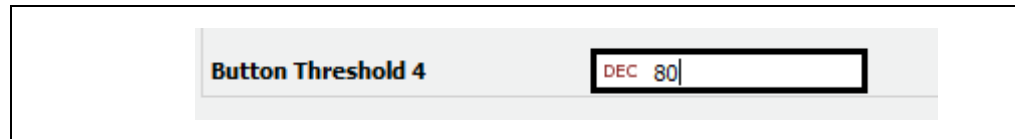

## 2.3 SIGNAL CONTROL PANEL

The Signal Control Panel is very similar to the Variable Control Panel. It allows the user to observe the register value, but instead of displaying the value in digit format, the variable will be plotted in the Signal Plotter Panel and shown as a bar graph in the Signal Level panel (see [Figure 2-16](#)).


**FIGURE 2-16: SIGNAL CONTROL PANEL**

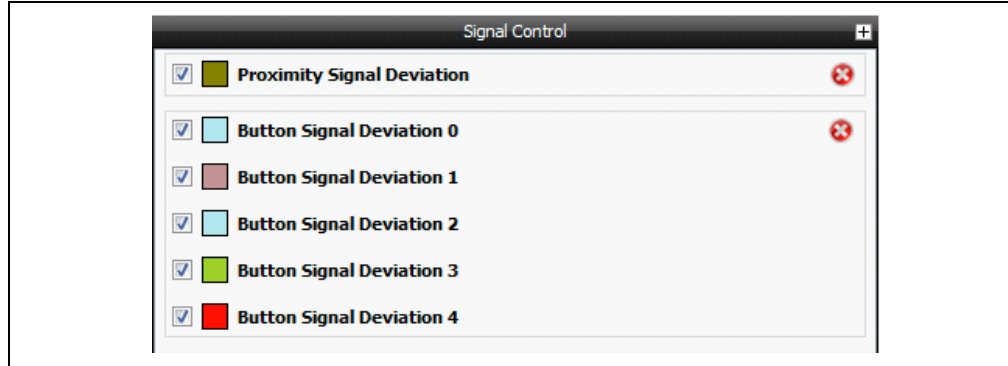

### 2.3.1 Add and Remove Signal

Clicking the "+" sign on the right top corner will bring up the window to specify the signal location, type and name as shown in [Figure 2-17](#).

**FIGURE 2-17: NEW SIGNAL WINDOW**

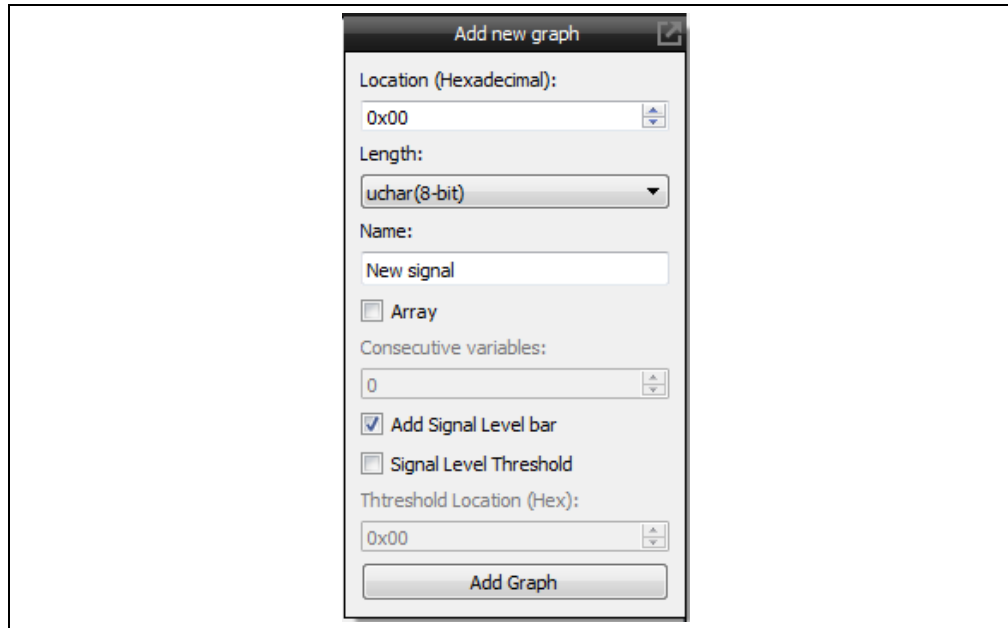

The signal level bar is optional, and a horizontal threshold bar can also be added for each signal in the Signal Level Panel. Note that the threshold is also a value read from target device, not an arbitrary number that can be set in the GUI.


To remove any signal, click the **cross icon** to the right of the signal name, which is the same as the variable control.

## 2.3.2 Signal Display Control

Each signal will be assigned a color for plotter and level bar; the color indication is shown to the left of the signal names, and the refresh period of the signal can also be changed in the same fashion as the variable.

Unchecking the checkbox to the left of the signal color indication can temporarily disable the signal display. For example, the “Button Signal Deviation 0” signal display is disabled, as shown in [Figure 2-18](#).


**FIGURE 2-18: SIGNAL ENABLE WINDOW**

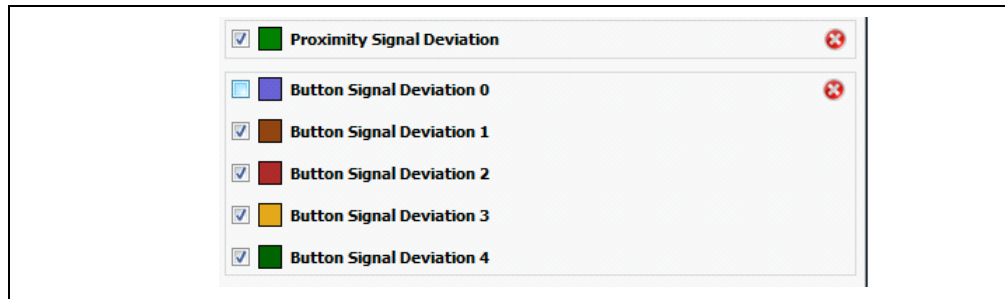

## 2.4 SIGNAL PLOTTER PATTERN

The Signal Plotter Panel plots the signals that are enabled in the Signal Control Panel. Each signal is color-coded as shown in [Figure 2-19](#).

**FIGURE 2-19: SIGNAL PLOTTER PANEL**

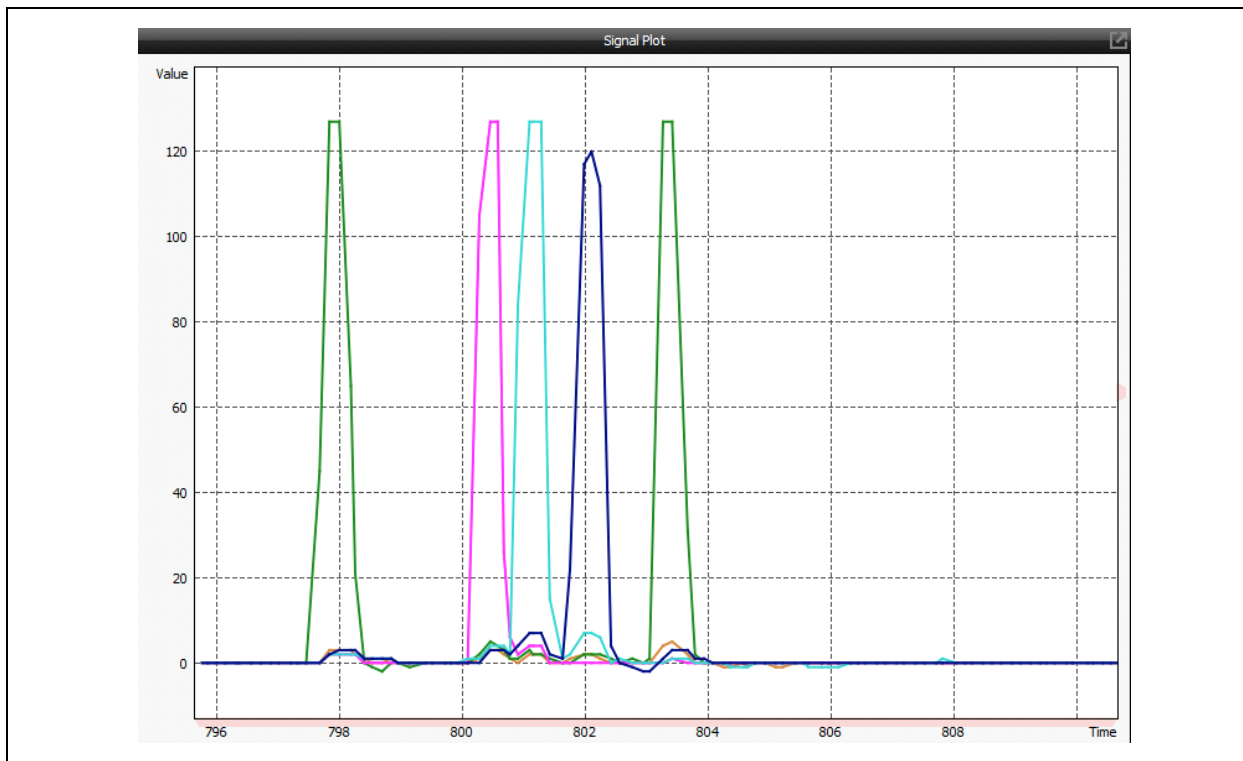


By default the plotter is in Auto-Zoom mode, which means the Y axis will be automatically adjusted, based of the signal value.

Scrolling up using the mouse wheel will zoom in the plotter, scrolling down will zoom out the plotter in the Y axis. Right clicking the plotter panel will restore the Auto-Zoom mode. For better observation, clicking the icon on the top right corner will put the plotter in Full-Screen mode.

## 2.5 SIGNAL LEVEL PLOTTER

The Signal Level Panel displays the signals in the bar graph as shown in [Figure 2-20](#).

**FIGURE 2-20: SIGNAL LEVEL PANEL**

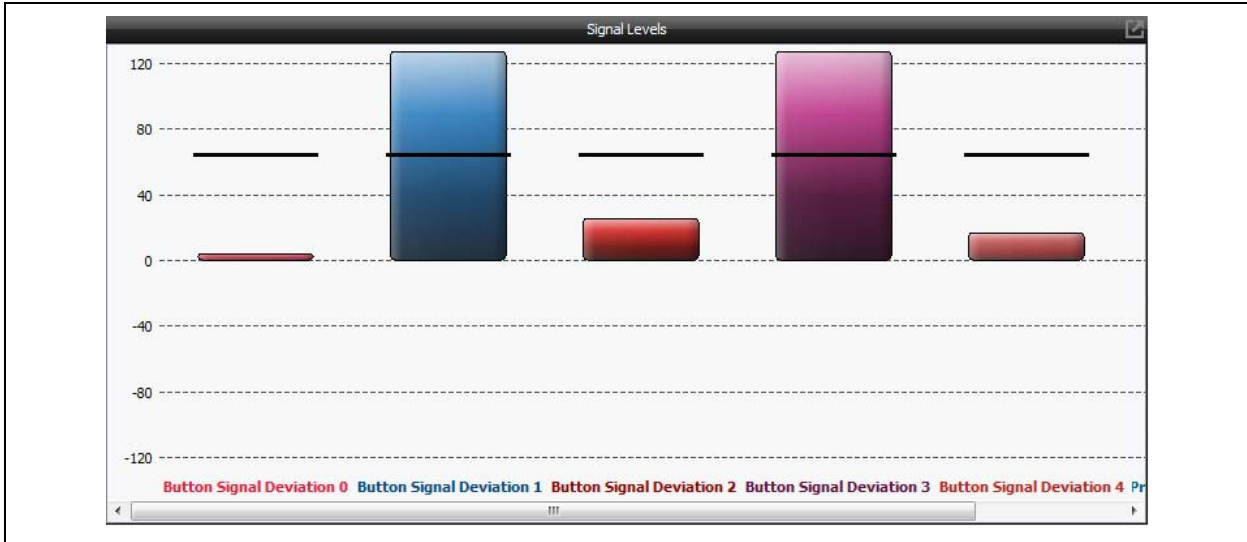


Similar to the Signal Plotter Panel, right clicking will auto-zoom the graph scale and Full-Screen mode can be enabled by clicking the icon on the top right corner.

## 2.6 EVENT LOG PANEL

The Event Log panel records the board information and the signal operations as shown in [Figure 2-21](#).

**FIGURE 2-21: EVENT LOG PANEL**

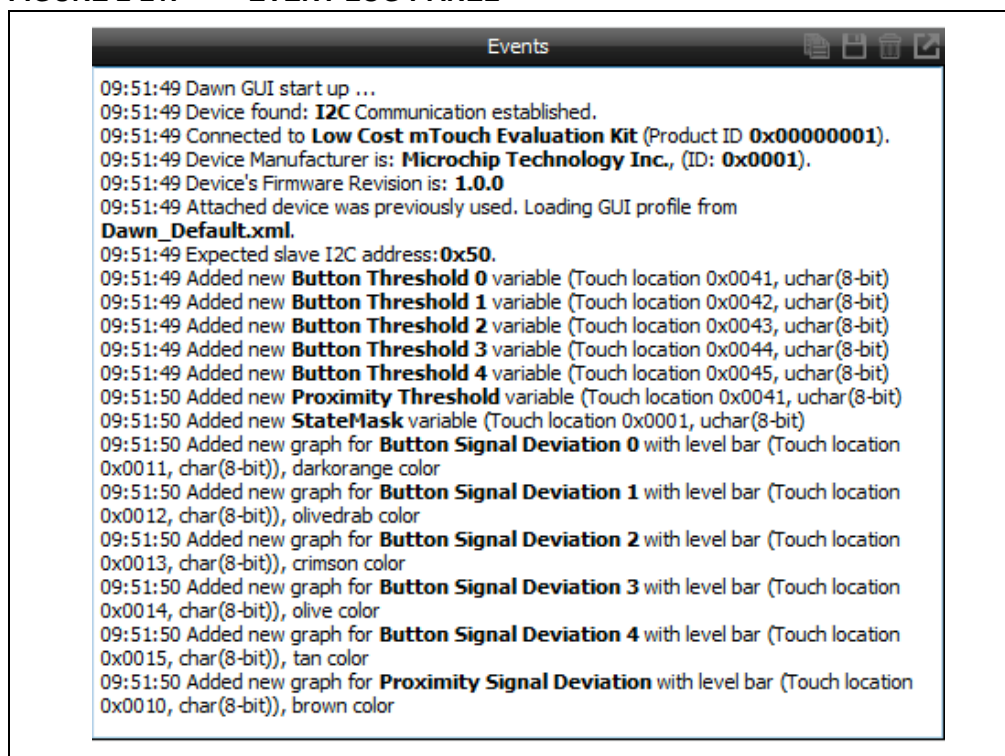


The events log can be saved to the system clipboard or to a .txt file by clicking the first two icons on the top right corner. The third icon will clear the Log window to give it a refresh start. The last icon is the same as in the Signal Plotter/Level Panel, which puts the panel into Full-Screen mode.

## 2.7 DAWN APPLICATION SETTING WINDOW

As mentioned in the Toolbar section, the 'Gear' icon will bring up the Dawn Application Settings window as shown in [Figure 2-22](#).

**FIGURE 2-22: DAWN APPLICATION SETTING WINDOW**

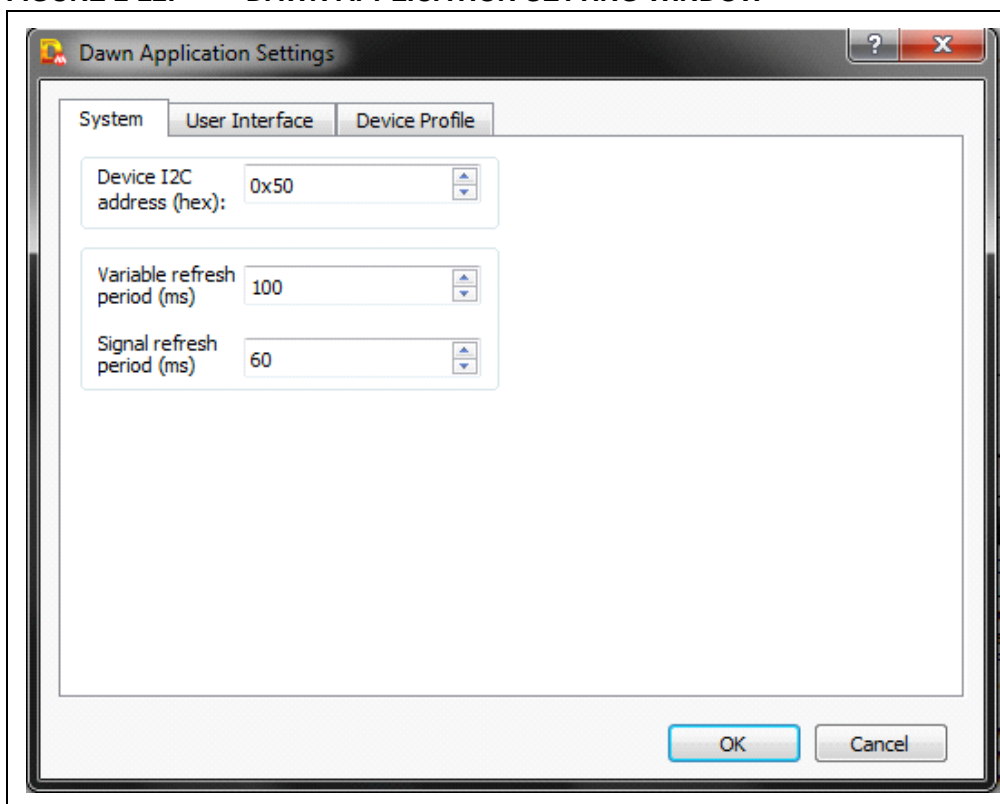

### 2.7.1 System Tab


The **System** tab allows the user to change the expected target device address and refresh period of Variable and Signal display.

**Note 1:** The I<sup>2</sup>C address is in 8-bit format, which is the 7-bit address and a Read/Write bit.

## 2.7.2 User Interface Tab

The **User Interface** tab controls how the signals are displayed as shown in [Figure 2-23](#).

**FIGURE 2-23: USER INTERFACE TAB**

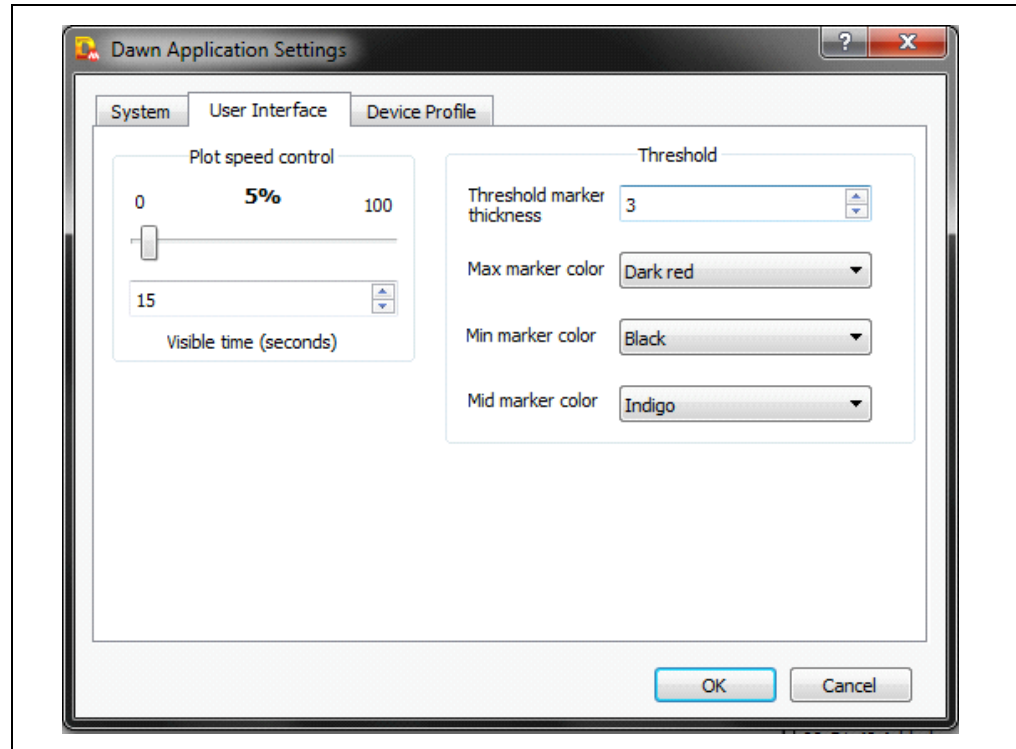


The plot speed control determines how many samples will be plotted in the Plotter window. The more visible time the user selects, the more samples the plotter displays, and the slower the plotter scrolls. The threshold container specifies the attributes for the threshold bar in the Signal Level Panel.

## 2.7.3 Device Profile Panel

The Device Profile Panel is a very handy feature, which eases the management of multiple profiles for different firmware/hardware.

**FIGURE 2-24: DEVICE PROFILE PANEL**

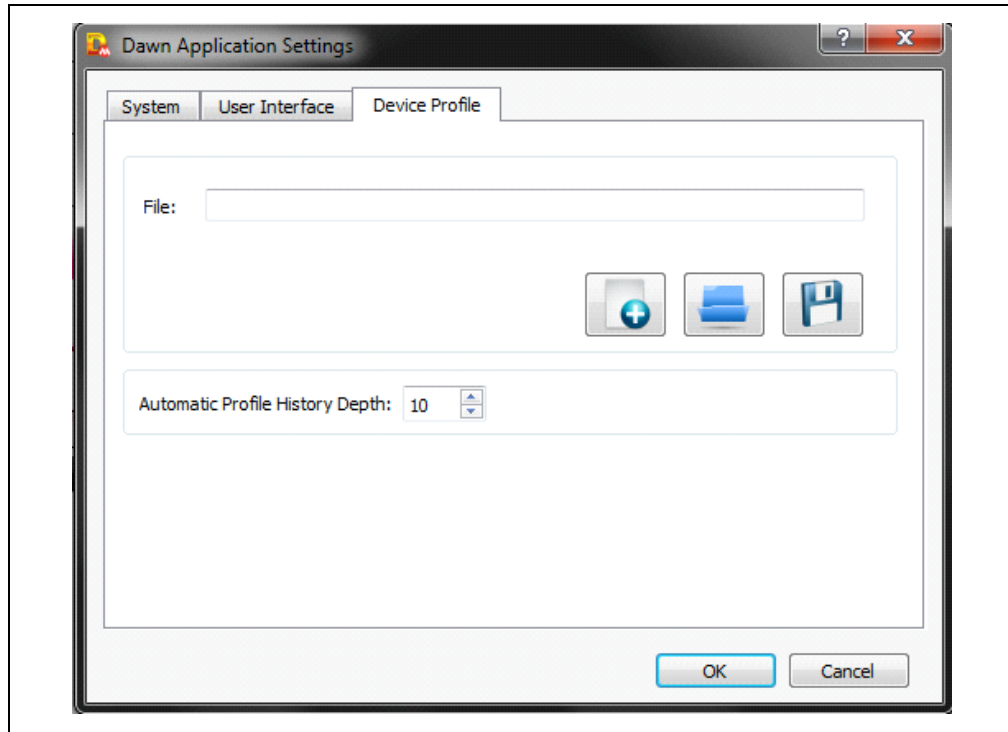

The profile of the Dawn GUI stores the device information and signal/variable configuration. Each time the user exits the Dawn GUI, the current information and configuration will be automatically stored in the `Dawn_default.xml` file in the installation folder, so next time the GUI can restore the last-time configuration. At the same time, the user can save and load profiles manually through the **Device Profile** tab as shown in [Figure 2-24](#).





# MICROCHIP

## Worldwide Sales and Service

### AMERICAS

#### Corporate Office

2355 West Chandler Blvd.  
Chandler, AZ 85224-6199

Tel: 480-792-7200

Fax: 480-792-7277

Technical Support:

[http://www.microchip.com/  
support](http://www.microchip.com/support)

Web Address:

[www.microchip.com](http://www.microchip.com)

#### Atlanta

Duluth, GA

Tel: 678-957-9614

Fax: 678-957-1455

#### Austin, TX

Tel: 512-257-3370

#### Boston

Westborough, MA

Tel: 774-760-0087

Fax: 774-760-0088

#### Chicago

Itasca, IL

Tel: 630-285-0071

Fax: 630-285-0075

#### Cleveland

Independence, OH

Tel: 216-447-0464

Fax: 216-447-0643

#### Dallas

Addison, TX

Tel: 972-818-7423

Fax: 972-818-2924

#### Detroit

Novi, MI

Tel: 248-848-4000

#### Houston, TX

Tel: 281-894-5983

#### Indianapolis

Noblesville, IN

Tel: 317-773-8323

Fax: 317-773-5453

#### Los Angeles

Mission Viejo, CA

Tel: 949-462-9523

Fax: 949-462-9608

#### New York, NY

Tel: 631-435-6000

#### San Jose, CA

Tel: 408-735-9110

#### Canada - Toronto

Tel: 905-673-0699

Fax: 905-673-6509

### ASIA/PACIFIC

#### Asia Pacific Office

Suites 3707-14, 37th Floor  
Tower 6, The Gateway  
Harbour City, Kowloon

#### Hong Kong

Tel: 852-2943-5100

Fax: 852-2401-3431

#### Australia - Sydney

Tel: 61-2-9868-6733

Fax: 61-2-9868-6755

#### China - Beijing

Tel: 86-10-8569-7000

Fax: 86-10-8528-2104

#### China - Chengdu

Tel: 86-28-8665-5511

Fax: 86-28-8665-7889

#### China - Chongqing

Tel: 86-23-8980-9588

Fax: 86-23-8980-9500

#### China - Dongguan

Tel: 86-769-8702-9880

#### China - Hangzhou

Tel: 86-571-8792-8115

Fax: 86-571-8792-8116

#### China - Hong Kong SAR

Tel: 852-2943-5100

Fax: 852-2401-3431

#### China - Nanjing

Tel: 86-25-8473-2460

Fax: 86-25-8473-2470

#### China - Qingdao

Tel: 86-532-8502-7355

Fax: 86-532-8502-7205

#### China - Shanghai

Tel: 86-21-5407-5533

Fax: 86-21-5407-5066

#### China - Shenyang

Tel: 86-24-2334-2829

Fax: 86-24-2334-2393

#### China - Shenzhen

Tel: 86-755-8864-2200

Fax: 86-755-8203-1760

#### China - Wuhan

Tel: 86-27-5980-5300

Fax: 86-27-5980-5118

#### China - Xian

Tel: 86-29-8833-7252

Fax: 86-29-8833-7256

### ASIA/PACIFIC

#### China - Xiamen

Tel: 86-592-2388138

Fax: 86-592-2388130

#### China - Zhuhai

Tel: 86-756-3210040

Fax: 86-756-3210049

#### India - Bangalore

Tel: 91-80-3090-4444

Fax: 91-80-3090-4123

#### India - New Delhi

Tel: 91-11-4160-8631

Fax: 91-11-4160-8632

#### India - Pune

Tel: 91-20-3019-1500

#### Japan - Osaka

Tel: 81-6-6152-7160

Fax: 81-6-6152-9310

#### Japan - Tokyo

Tel: 81-3-6880-3770

Fax: 81-3-6880-3771

#### Korea - Daegu

Tel: 82-53-744-4301

Fax: 82-53-744-4302

#### Korea - Seoul

Tel: 82-2-554-7200

Fax: 82-2-558-5932 or

82-2-558-5934

#### Malaysia - Kuala Lumpur

Tel: 60-3-6201-9857

Fax: 60-3-6201-9859

#### Malaysia - Penang

Tel: 60-4-227-8870

Fax: 60-4-227-4068

#### Philippines - Manila

Tel: 63-2-634-9065

Fax: 63-2-634-9069

#### Singapore

Tel: 65-6334-8870

Fax: 65-6334-8850

#### Taiwan - Hsin Chu

Tel: 886-3-5778-366

Fax: 886-3-5770-955

#### Taiwan - Kaohsiung

Tel: 886-7-213-7828

#### Taiwan - Taipei

Tel: 886-2-2508-8600

Fax: 886-2-2508-0102

#### Thailand - Bangkok

Tel: 66-2-694-1351

Fax: 66-2-694-1350

### EUROPE

#### Austria - Wels

Tel: 43-7242-2244-39

Fax: 43-7242-2244-393

#### Denmark - Copenhagen

Tel: 45-4450-2828

Fax: 45-4485-2829

#### France - Paris

Tel: 33-1-69-53-63-20

Fax: 33-1-69-30-90-79

#### Germany - Dusseldorf

Tel: 49-2129-3766400

#### Germany - Karlsruhe

Tel: 49-721-625370

#### Germany - Munich

Tel: 49-89-627-144-0

Fax: 49-89-627-144-44

#### Italy - Milan

Tel: 39-0331-742611

Fax: 39-0331-466781

#### Italy - Venice

Tel: 39-049-7625286

#### Netherlands - Drunen

Tel: 31-416-690399

Fax: 31-416-690340

#### Poland - Warsaw

Tel: 48-22-3325737

#### Spain - Madrid

Tel: 34-91-708-08-90

Fax: 34-91-708-08-91

#### Sweden - Stockholm

Tel: 46-8-5090-4654

#### UK - Wokingham

Tel: 44-118-921-5800

Fax: 44-118-921-5820

07/14/15