
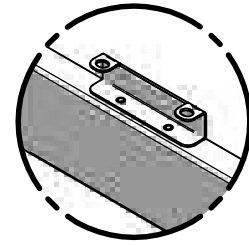


# C4BD - SERIES

ASSEMBLY INSTRUCTIONS FOR  
C4 BARN DOORS (VENTED VERSION  
SHOWN)

BUL10325  
REV. A  
PAGE 1 OF 1

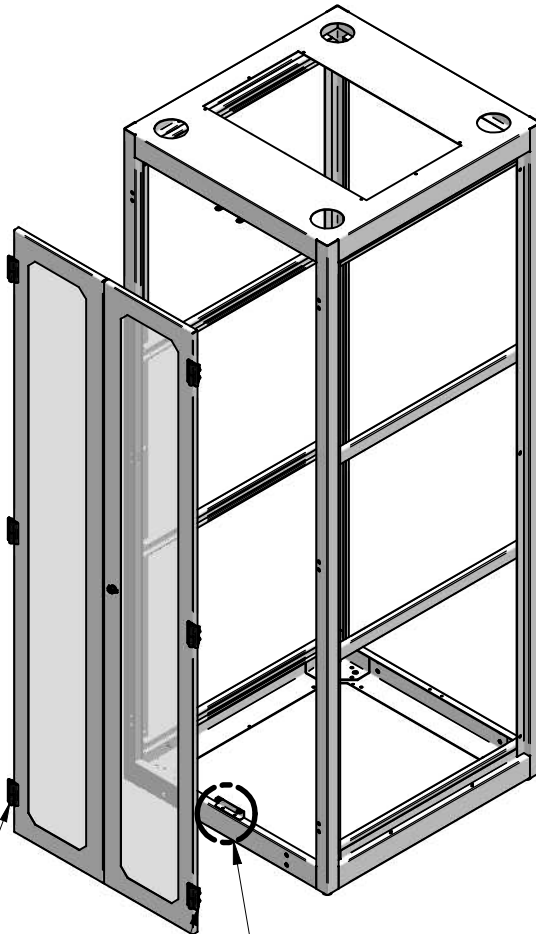

DETAIL A  
TYP TOP & BOTTOM

INSTALL STOP-BRACKETS IN HOLES ON FRAME AND FASTEN SECURELY USING HARDWARE SUPPLIED.

IF HOLES ARE NOT PRESENT IN CABINET THEN REFER TO BUL10326 TO MANUALLY DRILL.

ENSURE LEFT HAND HINGES ARE USED.

ENSURE RIGHT HAND HINGES ARE USED.

SEE DETAIL A

SEE BUL10300 FOR PROPER HINGE INSTALLATION.

STEP 1: Install Stop Bracket at top & bottom of cabinet as shown in Detail A.

STEP 2: Install hinges on doors and cabinet. (Refer to BUL10300 for proper hinge installation.)

STEP 3: Locate doors on the cabinet.

PARTS LIST	
DESCRIPTION	QTY
MASTER DOOR	1
SLAVE DOOR	1
R.H. HINGES	1 KIT
L.H. HINGES	1 KIT
STOP BRACKET	2
8-32 NUTS	4

TOOL BOX



Adjustable Wrench



**HAMMOND**  
**MANUFACTURING™**  
ELECTRONICS GROUP

visit our website @ [www.hammondmfg.com](http://www.hammondmfg.com)